 


Power On Using the AC adapter Plug the AC adapter into the power connector of the EPD device, and it will turn on automatically. ✖ If the device is turned off while the AC adapter is connected, press the power key for about two seconds to turn it on.

Power Off Long press the power key for about four seconds, and the LED light will turned off.

◆ If using an AC adapter, we recommend that do NOT unplug the AC adapter while the device is on, as this may result in data loss. Please long press the power key to turn off the device, and unplug the AC adapter after the LED light is off

If there is no image in the device, the following image will be displayed:

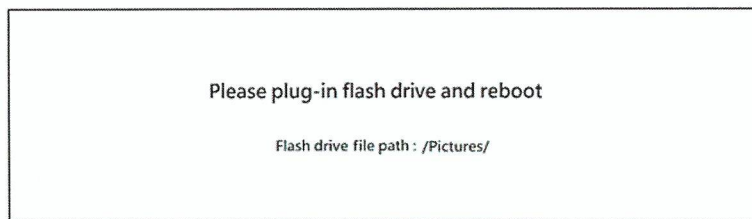


Please refer Chap. 2 to put images into the device for display.

If there are images in the device, the device will loop display the images.

If there is only one image in the device, the device will turn off after the image display is complete.

Press the universal key to pause the image, and press it again to continue the display loop

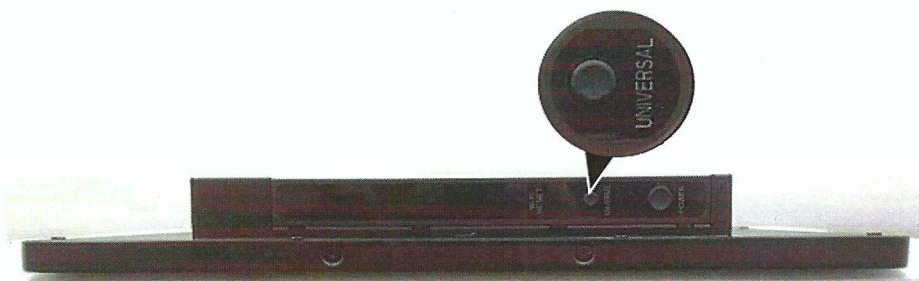

Change Display Images

Image Requirements

A. Supported Formats .bmp .png .jpg .jpeg .webp

B. Resolution


The EPD panel Width (pixels) Height (pixels)

25.3'' 3200 1800


Change the Images Using a USB Drive (or SD Card)

◆ SD cards in NTFS format are not supported.

A. Create a folder named Pictures on your USB drive (or SD card) root directory.

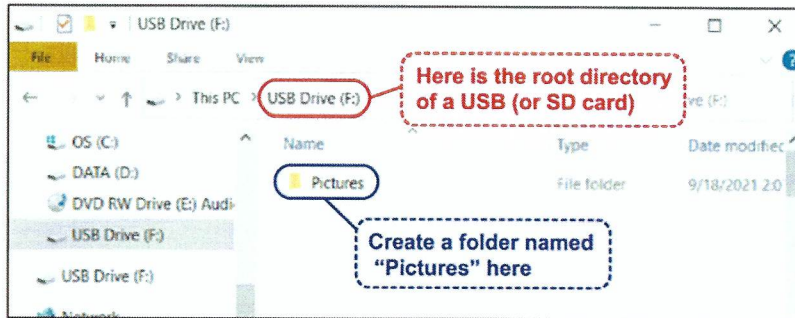

B. Put images into the Pictures folder on your USB drive (or SD card)

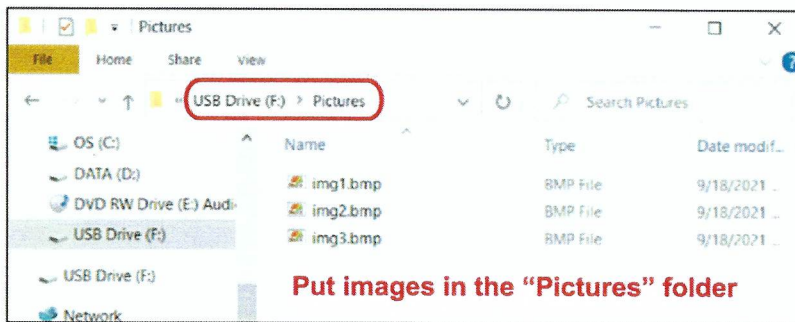


D. If the EPD device is turned on, turn it off.


E. Plug the USB drive (or SD card) into the EPD device.

F. Turn on the EPD device.

G. The EPD device will display the following image, which means the Pictures folder is being copied from the USB drive (or SD card) to the internal storage of the EPD device, please wait for a minute

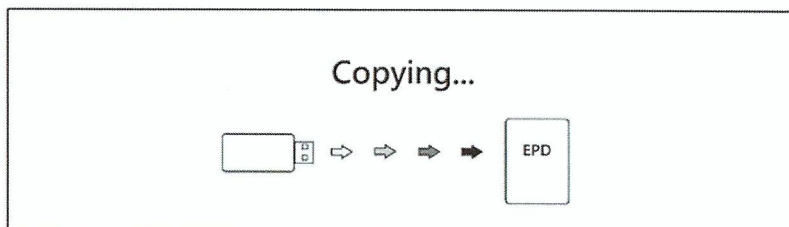

H. If the copied files are correct, the EPD device will display the following image when the copy is complete:

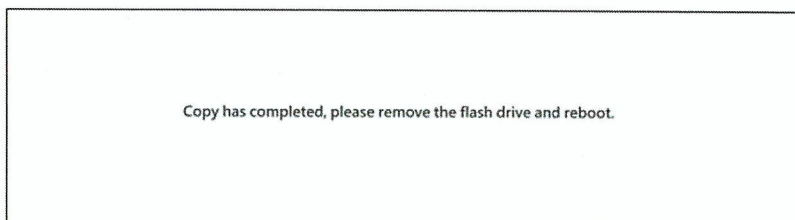

Otherwise, if the copied files are wrong, an error message image will be displayed.

Please correct the errors and start over from step A.

I. After the above image display complete, turn off the EPD device.

J. Unplug the USB drive (or SD card).

 
K. Turn on the EPD device, and it will start to loop display the images

Change the Images Using PC


A. Turn on the EPD device.

B. Connect the EPD device and your PC with a USB cable.


C. Open file explorer on PC, choose ePaper Signage, and click Internal shared storage.

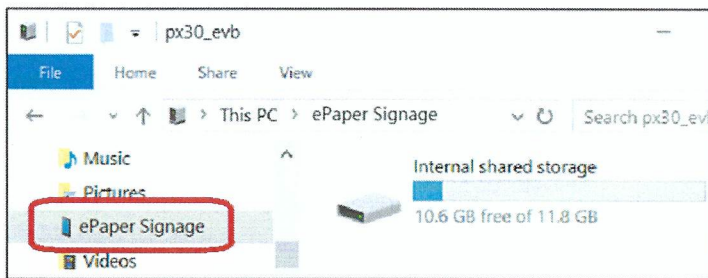

 D. Choose Pictures folder

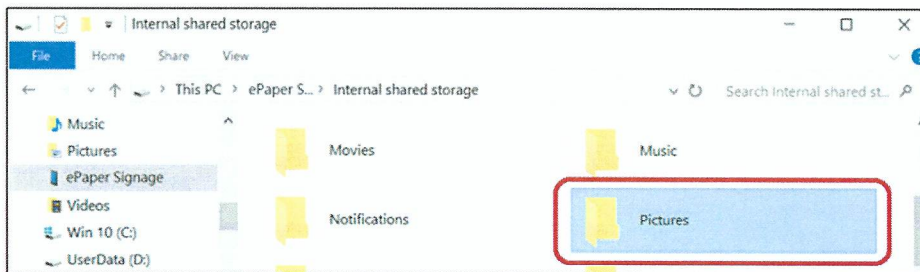

E. Put images (and config.xml file if needed) in the Pictures folder

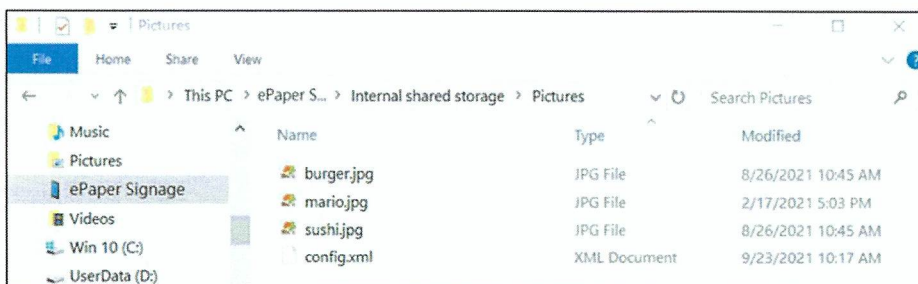

F. Reboot the EPD device, and it will start to loop display the images

開機

使用交流適配器開機 將交流適配器插入 EPD 設備的電源接口，設備將自動開機。


※ 如果在連接 AC 適配器時關閉設備，請按住電源鍵約兩秒鐘將其打開。

關機

長按電源鍵四秒左右，LED 燈熄滅。

◆ 如果使用 AC 適配器，我們建議不要在使用時拔下 AC 適配器。設備已打開，因為這可能會導致數據丟失。請長按電源鍵開機關閉設備，並在 LED 燈熄滅後拔下 AC 適配器。

如果設備中沒有圖像，將顯示以下圖像：

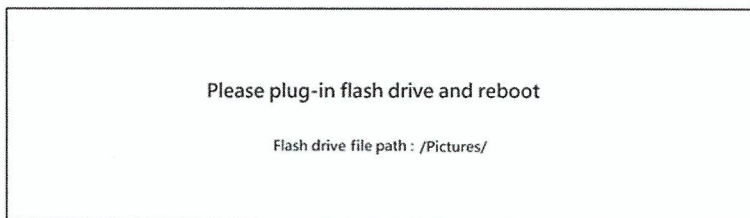


將圖像放入設備進行顯示。

如果設備中有圖像，設備將循環顯示圖像。

如果設備中只有一張圖像，則圖像顯示完成後設備將關閉。

按萬能鍵暫停圖像，再按一次繼續循環顯示

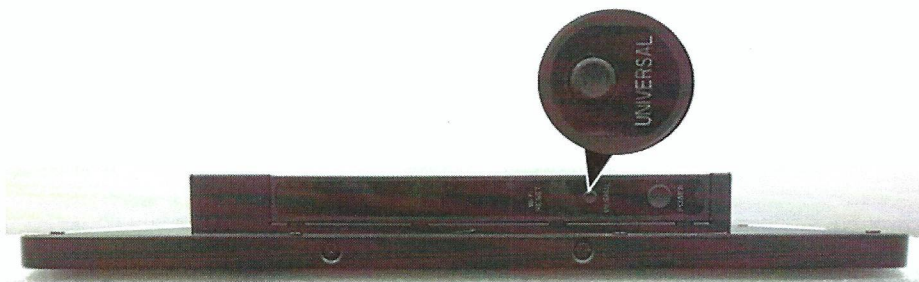

更改顯示圖像

圖片要求

A. 支持的格式

.bmp	.png	.jpg	.jpeg	.webp
------	------	------	-------	-------


B. 解析度

電子紙設備面板	寬度（像素）	高度（像素）
25.3"	3200	1800


使用 USB 驅動器（或 SD 卡）更改圖像

◆ 不支持 NTFS 格式的 SD 卡。

A. 在您的 U 盤（或 SD 卡）根目錄下創建一個名為 **Pictures** 的文件夾。

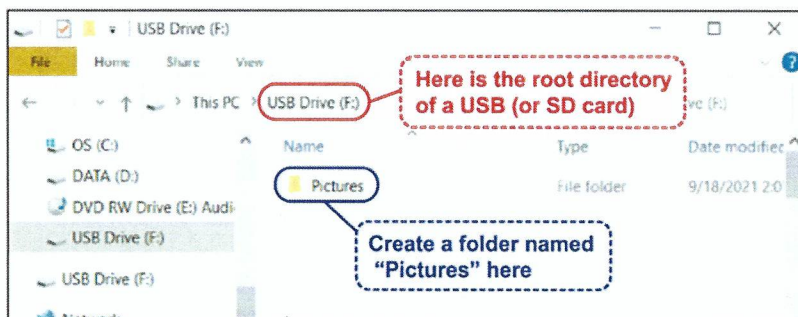

 B. 將圖片放入 U 盤（或 SD 卡）的 Pictures 文件夾中

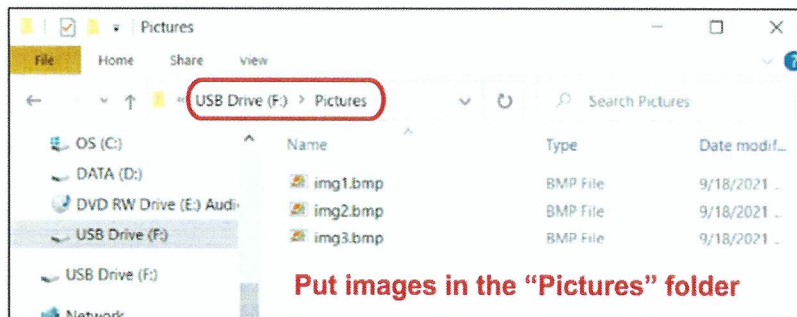


C. 如果電子紙設備已打開，請將其關閉。


D. 將 USB 驅動器（或 SD 卡）插入電子紙設備。

E. 打開電子紙設備。

F. 電子紙設備會顯示如下圖，表示正在從 U 盤（或 SD 卡）複製圖片文件夾到 EPD 設備的內部存儲，請稍等電子紙設備

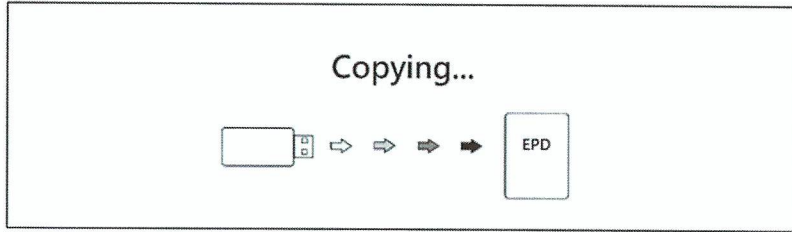

H. 如果復制的文件正確，複製完成後電子紙設備會顯示如下圖：

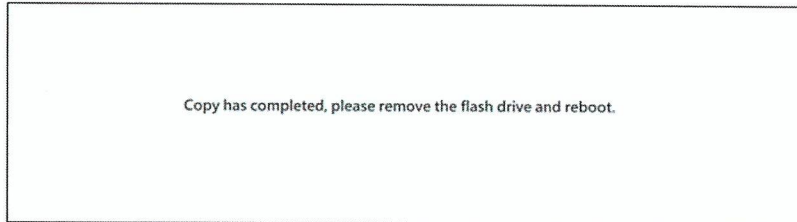

否則，如果復制的文件有誤，將顯示錯誤信息圖像。請更正錯誤並從步驟 A 重新開始。

一、以上圖像顯示完成後，關閉 EPD 設備。

I. 拔下 USB 驅動器（或 SD 卡）。

 
J. 打開電子紙設備，開始循環顯示圖像

使用 PC 更改圖像


A. 打開 EPD 設備。

B. 使用 USB 數據線連接電子紙設備和您的 PC。


C. 在 PC 上打開文件資源管理器，選擇 ePaper Signage，然後單擊內部共享存儲。

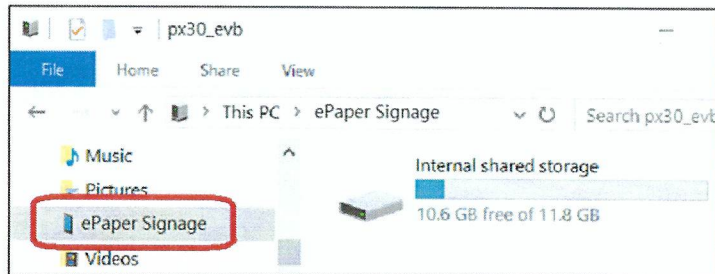

D. 選擇圖片文件夾

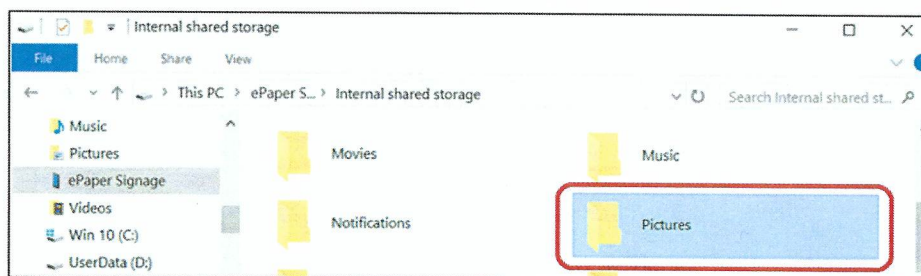

 E. 將圖像放入 Pictures 文件夾：

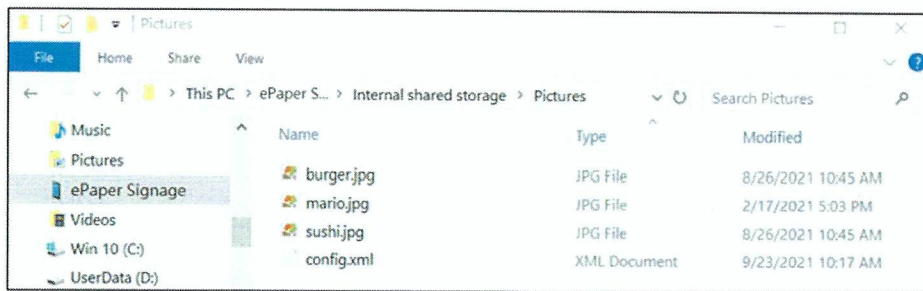

F. 重新啟動設備，它會開始循環顯示圖像

LINE 官網維修通報:



連絡電話:02-2950-0600